Features and Button Function

The **THUMB STICK (5-way)**

- Press in to enter highlighted options and to confirm messages

- Move Up/Down or Right/Left to move through lists, highlight fields, on-screen buttons, icons, enter data or move the map panning arrow

- Press in and hold for two seconds to mark your current location as a waypoint

Internal Antenna
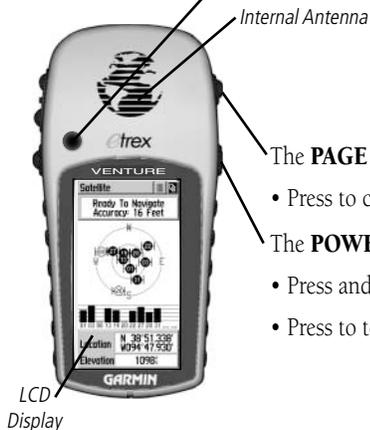
The **PAGE** button:

- Press to cycle through main pages.

The **POWER** button:

- Press and hold to turn the unit On/Off.

- Press to toggle display backlighting On/Off.

LCD Display

Power/Data Connector Cover

External Power and Data Connector with Alignment Bar

The **ZOOM IN/OUT** buttons:

- When on the Map Page, press to Zoom in and out.

- When on the Satellite Page, press to adjust the screen contrast.

The **FIND** button:

- Press to access the Find Menu

Installing the lanyard

Carry Lanyard Slot

Battery Compartment Cover

NOTE: The eTrex Venture is designed to be held and operated in the left hand, but it can be held and operated using the right hand as well to suit your preference.

2